



STEP1 : Remove the DVR cover and find the chip resistor to reset the hardware (next to the battery)

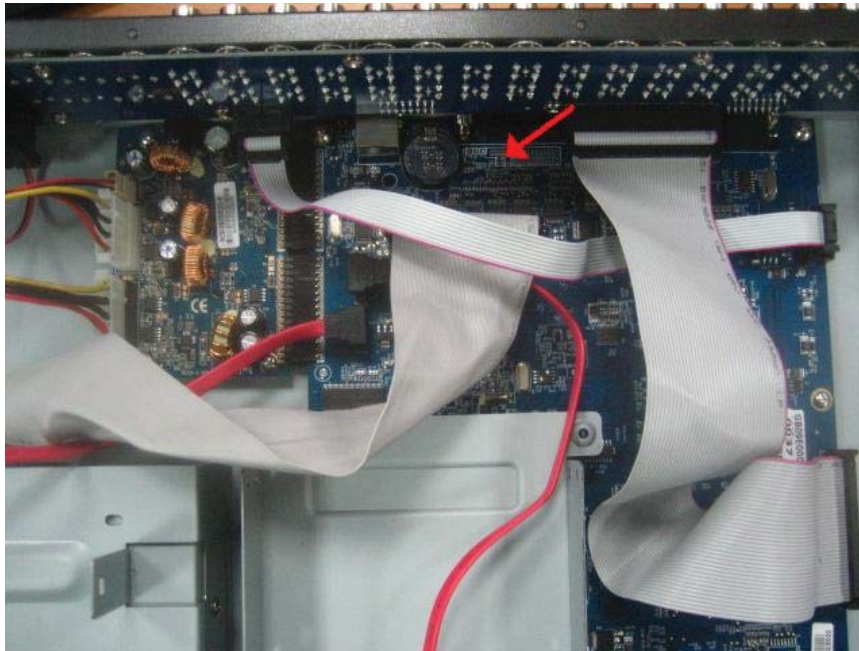

STEP2 : The chip resistor is located on T3, as indicated below :

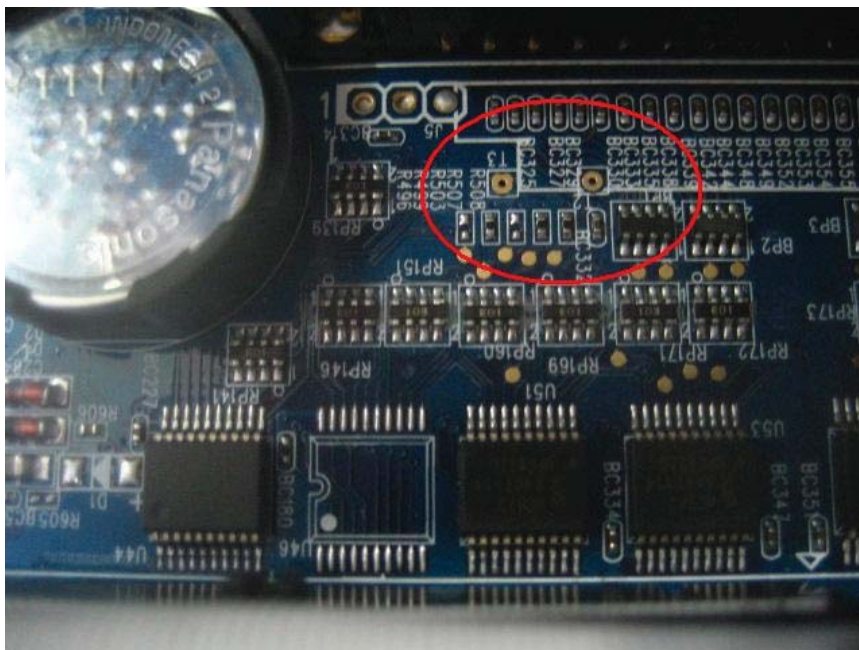

STEP3 : Disconnect the DVR power. Then, make the chip resistor short-circuited with a conductive object (such as forceps) as indicated below, and re-connect the power. Remove the conductive object when you hear a short beep sound, and wait till the DVR reboots.

